SCALE 1"=30'

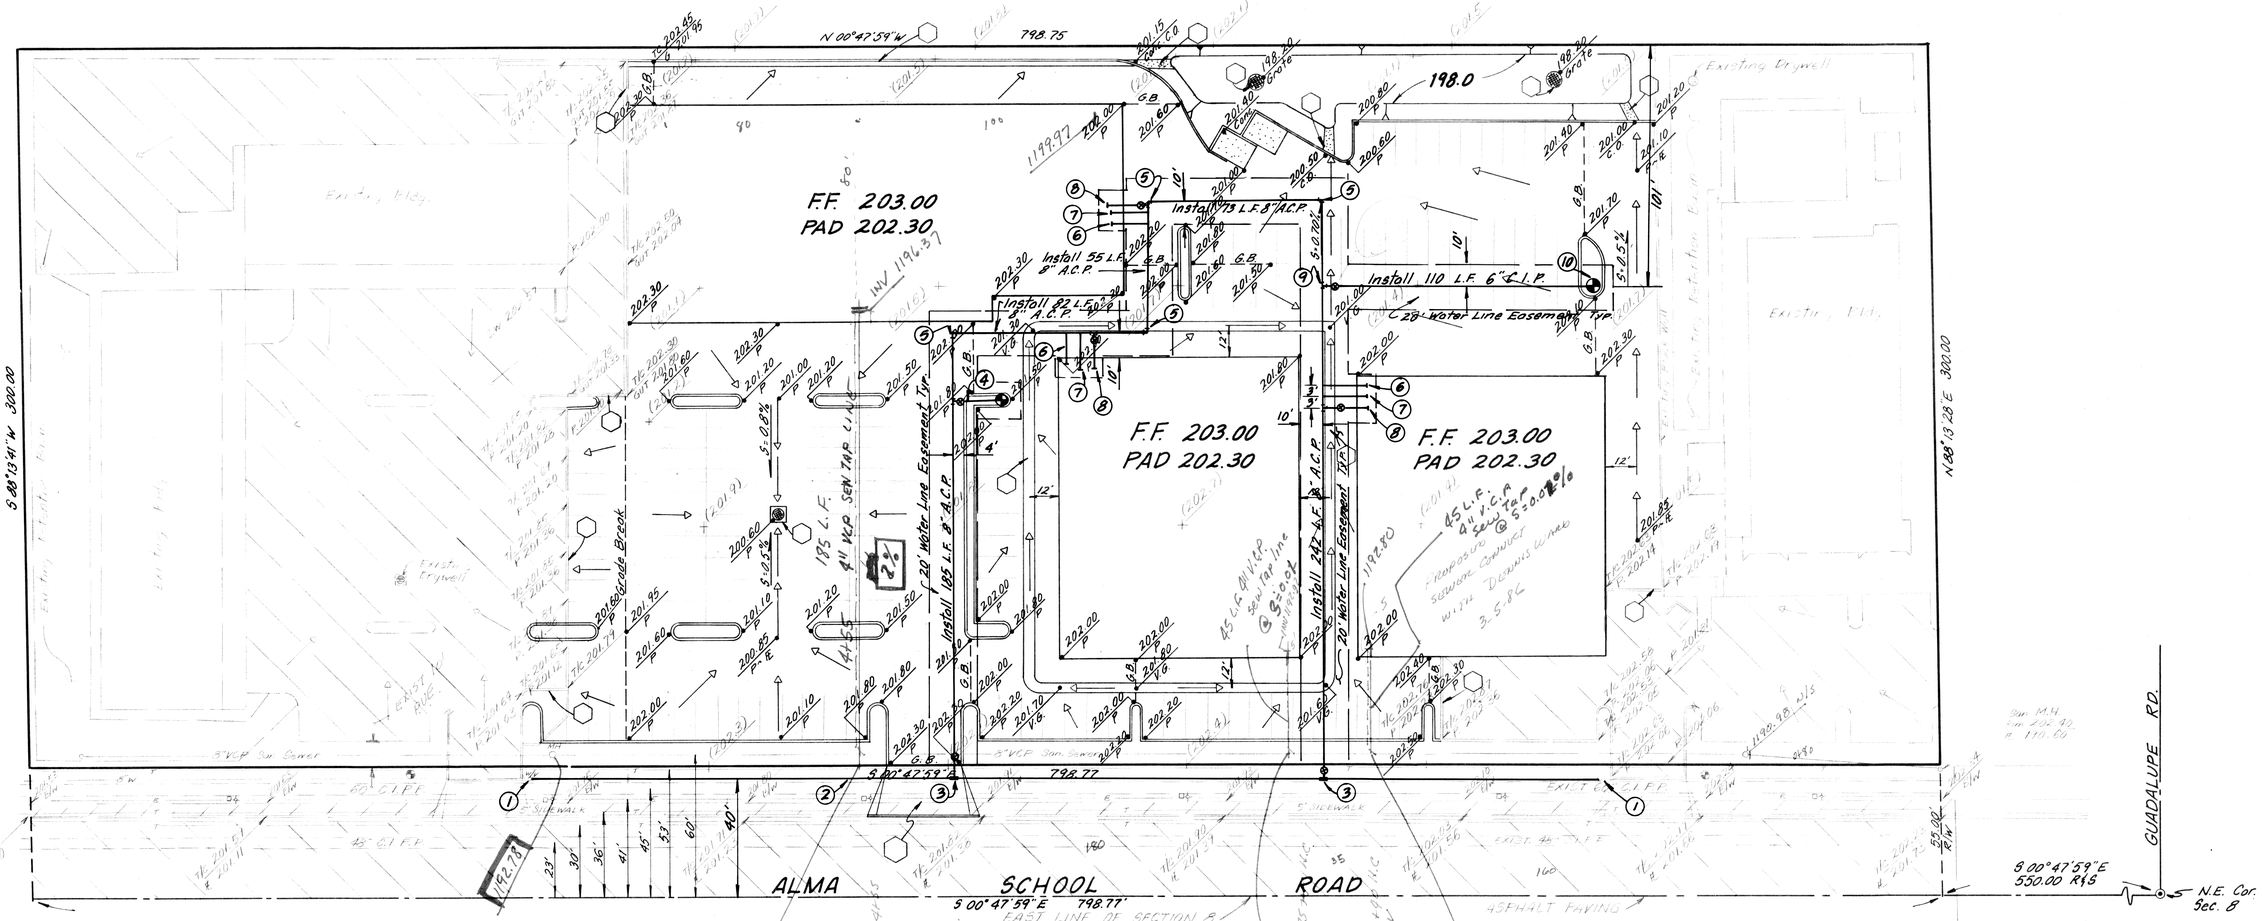

CONSTRUCTION NOTES

1. Contractor To Verify Exact Size, Location and Depth of Existing Water Line Prior To Construction.
2. Install 450 L.F. 8" A.C.P. Water Line.
3. Install 8" Tee Per M.A.G. S.D. 391-1 "A".
4. Install Fire Hydrant Complete Per M.A.G. S.D. 360 & 391-1 "A".
5. Install 8"-90° Bend.
6. Install 2" Service and Stub Behind Pavement For Future Use.
7. Install 1½" Service and Stub Behind Pavement For Future Use.
8. Install 8"x4" Tee and Install 4" Service Behind Pavement For Future Use.
9. Install 8"x6" T.S.V.B. & C. Per M.A.G. S.D. 340 & 391-1 "A".
10. Install Fire Hydrant Per M.A.G. S.D. 360.

THESE QUANTITIES ARE MEANT AS A GUIDE FOR CITY BONDING PURPOSES ONLY. CONTRACTOR SHOULD VERIFY QUANTITIES AND BASE HIS BID SOLELY UPON HIS OWN ESTIMATE.

QUANTITIES

ITEM	QTY.	UNIT
8" A.C.P. WATER LINE	1090	L.F.
6" C.I.P. WATER LINE	110	L.F.
8" TEE	2	Ea.
FIRE HYDRANT COMP.	1	Ea.
8"-90° BEND	4	Ea.
8"x4" TEE & SERVICE	3	Ea.
2" SERVICE & STUB	3	Ea.
1½" SERVICE & STUB	3	Ea
8"x6" TEE	1	Ea.
FIRE HYDRANT	1	Ea.

Sew Service ⑧ to Set @ min Grade
exceptable
CHECK WITH Reed "OK" 3-10-86 FROM ROAD

THIS INFORMATION GIVEN TO DENNIS @ C.S.A. ON 3-10-86 Check

DIN 59182-2

REVISIONS				
NO.	DATE	DESCRIPTION	IN	✓

TMA CONSULTING ENGINEERS & LAND SURVEYORS
P.O. BOX 8513
MESA, ARIZONA 85204
(602) 833-2007

DATE:
SCALE:
HORIZ:
VERT:
DES: CK:
JOB NO.
SHT: OF